


## OPERATING INSTRUCTIONS

### L2VB40C\_O

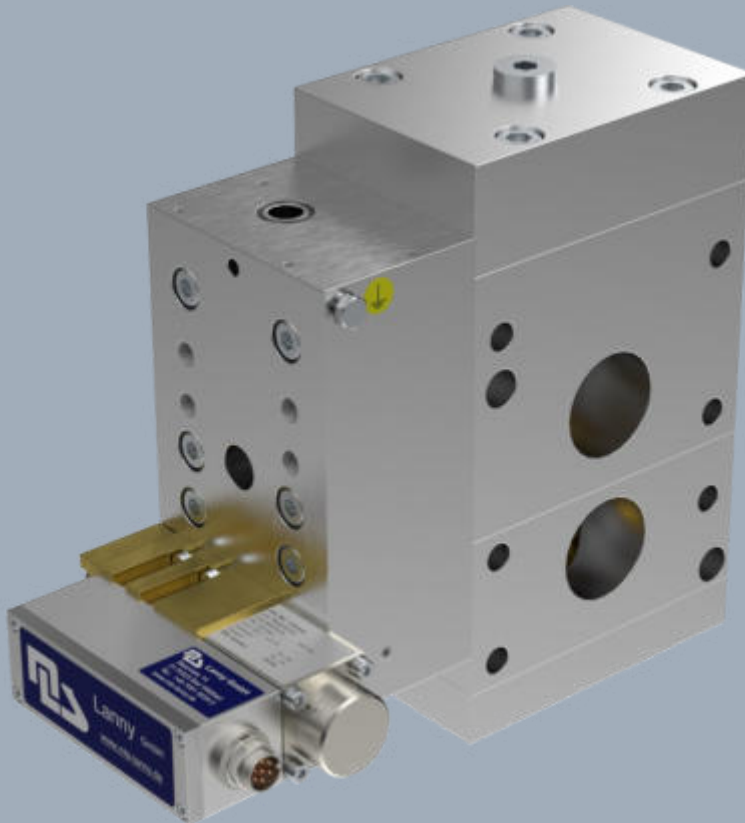

**The Lanny Valve –  
Precision valve technology for high performance engineering.**

## Summary

The L2V series is a high precise valve for the control of compressed air or other gases for a wide range of industrial applications.

It is optimized for stretch blow moulding applications

It ensures consistent performance, even in demanding environments.

It is manufactured from high quality materials for a long service life.

### Main features:

- Large control range and highly precise even at low pressure levels.
- Available with analogue or bus control.
- Large scale of variants and special versions e.g. pressure switches or inlet pressure monitoring.
- Inlet pressure: Maximum 45 bar
- Pressure control range: 0 to 40 bar
- Flow rate: 10,950 l/min respectively 657 m<sup>3</sup>/h (air) at 8 bar inlet pressure and 7 bar outlet pressure
- Ambient temperature: 0 to 40 °C
- Medium temperature: 0 to 40 °C
- Protection rating: IP40
- Ports: inlet, outlet and exhaust (40 mm)

### **MLS Lanny GmbH**

Beermiss 14, D-75323 Bad Wildbad (Germany)

Fon: +49 (0)7081 9534-0

E-Mail: [info@mls-lanny.de](mailto:info@mls-lanny.de)

Website: [www.mls-lanny.de](http://www.mls-lanny.de)

## Table of contents

<b>1</b>	<b>Important notice regarding these operating instructions .....</b>	<b>4</b>
1.1	About these operating instructions .....	4
1.2	Operator duty .....	4
1.3	Obligations of the operating personnel .....	4
1.4	Liability .....	4
1.5	Important notes on warranty / guarantee .....	4
<b>2</b>	<b>Safety .....</b>	<b>5</b>
2.1	Intended use .....	5
2.2	Not intended use .....	5
2.3	Explanation of the symbols .....	5
2.4	General safety instructions .....	6
<b>3</b>	<b>Device description .....</b>	<b>8</b>
<b>4</b>	<b>Technical specifications .....</b>	<b>9</b>
4.1	Electrical data table .....	10
4.2	Pin assignment .....	10
4.1	<b>Dimensions .....</b>	<b>11</b>
4.2	Flow chart .....	12
<b>5</b>	<b>Packaging and transport .....</b>	<b>13</b>
<b>6</b>	<b>Installation and connection .....</b>	<b>13</b>
6.1	Prior to installation .....	13
6.2	Mounting and pneumatic installation .....	14
6.3	Electrical installation .....	14
<b>7</b>	<b>Commissioning, operation, malfunction .....</b>	<b>14</b>
7.1	Failure .....	15
<b>8</b>	<b>Maintenance and cleaning .....</b>	<b>15</b>
8.1	Maintenance .....	15
8.2	Cleaning .....	15
<b>9</b>	<b>Disassembly .....</b>	<b>16</b>
<b>10</b>	<b>End of life – EOL disposal .....</b>	<b>16</b>
<b>11</b>	<b>Imprint .....</b>	<b>16</b>

## **1 Important notice regarding these operating instructions**

### **1.1 About these operating instructions**

IMPORTANT  
READ CAREFULLY BEFORE OPERATING  
KEEP FOR FUTURE USE

The operating instructions are intended exclusively for qualified specialists who have the appropriate qualifications to professionally install, commission and disassembly MLS valves.

Keep the operating instructions permanently and always accessible to qualified personnel. If the device is being handed over to third parties, make sure to hand over the operating instructions as well.

The accident prevention regulations and the general safety regulations must be adhered to when operating the device.

### **1.2 Operator duty**

Duties of the operator include:

- Compliance with the Industrial Safety Ordinance
- Compliance with the valid national regulations for work safety
- Compliance with the intended use of the device
- Expert instruction of the operating personnel

### **1.3 Obligations of the operating personnel**

All persons who are commissioned to work on this device have to

- comply with the general regulations for work safety and accident prevention.
- read and comply with all safety instructions in this manual.

### **1.4 Liability**

The manufacturer assumes no liability for damage and malfunctions that occur as a result of non-compliance with the operating instructions.

If the device is misused, not used as intended, falsely operated, or not professionally installed, repaired and maintained, no liability can be granted.

### **1.5 Important notes on warranty / guarantee**

---

#### **NOTICE**

The warranty / guarantee expires automatically if the type sticker or the serial number is changed, made illegible or removed.

---

---

#### **NOTICE**

Subject to technical changes without special notice. Design may differ from the actual product. Its design and technical data may change in the process of development without notification.

---

## 2 Safety

### 2.1 Intended use

The MLS valve serves exclusively as a unit for controlling compressed air, oxygen and other gases for industrial applications.

The valve is intended solely for operation within the limits specified in the technical data.

The valve may only be used in compliance with the instructions in this manual and the safety instructions

The device may not be converted or changed in any other way.

### 2.2 Not intended use

The MLS valve is only approved for the purpose as defined under the intended use.

- It must not be used with gases or pressure ranges other than those specified under the intended use.
- It is not approved for outdoor use.

### 2.3 Explanation of the symbols

Important notes, such as safety-relevant notes, are marked by corresponding symbols. Always comply with these notes, in order to avoid accidents and damage to the valve.

#### DANGER

DANGER indicates a hazardous situation which, if not avoided, will result in death or serious injury.

#### WARNING

WARNING indicates a hazardous situation which, if not avoided, could result in death or serious injury.

#### CAUTION

CAUTION indicates a hazardous situation which, if not avoided, may result in minor or moderate injury

#### NOTICE

NOTICE indicates a property damage message.

## 2.4 General safety instructions

### **Danger**

#### **Danger to life due to incorrect installation**

Improperly fastened connections can come loose due to the high pressure and cause life-threatening injuries.

- The valve must be secured to all mounting holes on the machine structure.
- All connections must be made using lines designed for this pressure.
- Observe the correct tightening values of the parts manufacturer for fastening and connections.

### **WARNING**

#### **Operator errors or failure to comply with the safety instructions can result in serious injury or property damage.**

- Read the operating instructions attentively and carefully before installing and commissioning.
- Observe the safety instructions at all times.
- Operate the product exclusively in the sense of its intended use.
- Operate the product only within the intended limits of the technical data as specified in this specification.

### **WARNING**

#### **Pressurized systems and facilities must be operated by qualified personnel only!**

Assembly, installation, commissioning, maintenance and disassembly of compressed air systems may only be carried out by trained and experienced personnel.

### **WARNING**

#### **Pressurized systems!**

- Note that the product is only designed for the highest permissible input pressure described in the technical data. This input pressure must not be exceeded.
- Pressure lines and screw connections must be adequately designed for the input pressure and output pressure of the valve. Permissible input and output pressure can be found in the technical data.
- Ensure that the pressure lines are connected properly to the input and output, before pressurizing the system.
- Make sure the screw connections between the compressed air supply lines and the product are tight to prevent unintentional loosening.
- Turn off the pressure supply, release the residual pressure, and remove all pressure connections before replacing or maintenance of the valve.

### **WARNING**

#### **Danger of explosion!**

- Do not operate the valve in rooms with flammable gases, steams or dust.
- Do not use the control valve for the pressure control of flammable or explosive gases.

## **⚠ WARNING**

**A product with malfunction or which cannot be used safely can cause injury!**

Safe operation is no longer possible if:

- the product is damaged.
- the product is not fully functional.
- parts of the product are loose.
- the connection lines are damaged.

In these cases, the product must be put out of operation, considering all relevant safety instructions.

## **NOTICE**

In order to operate the product EMC-compliant, the following conditions must be met:

- Use only shielded cables for the electrical connection of the product.
- Lay shield connection, plug and switch cabinet to earth in compliance with EMC.
- Lay the product body and housing electrically to ground (PE, machine ground).
- While under voltage, do not connect or disconnect the plug.
  - First connect the plug and then switch on the power supply.
  - Switch off the power supply first, then disconnect the plug.
- The maximum length of the connection cable must not exceed 30 m.


## **NOTICE**

### **Risk of damage to the product**

The following instructions must be observed to prevent damage:

- Make sure that the product is not contaminated during the assembly. Keep it free of dust, oil and grease.
- Make sure that the system is equipped with filters for air quality according to the information in the technical data.
- Operate the product only with the specified supply voltage.
- Overvoltage can destroy the electronics! Use a suitable fuse. Earth the product at the central grounding point (at the marked screw connection).
- Use shielded cables for the electrical connection.
- Do not lay control cables parallel to power cables or control lines of servomotors, otherwise the control signal may be disturbed.
- Do not operate the device in humid environments, max. 5 – 95%. The electronics must not come into contact with moisture or liquids.

### 3 Device description

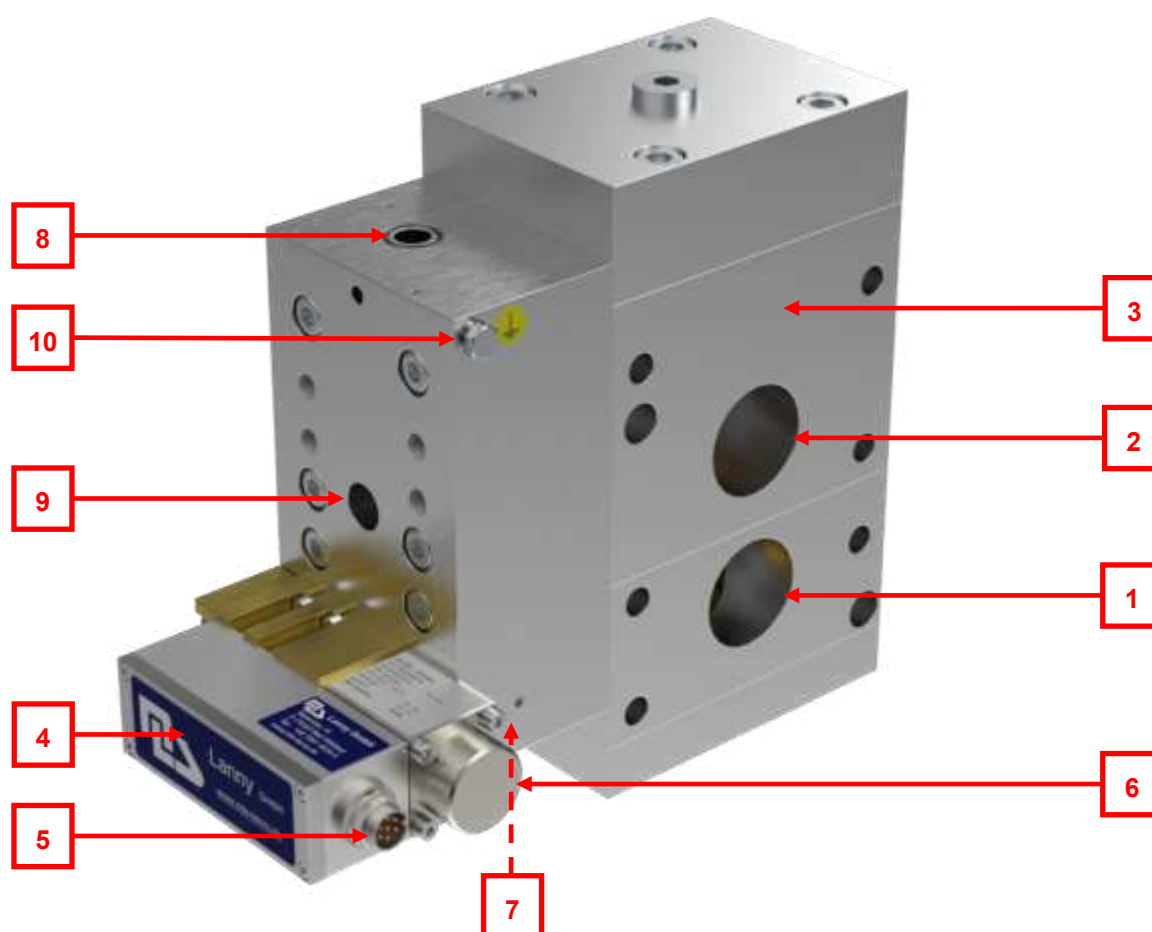

1	Input
2	Output
3	Dome
4	Pilot valve
5	Electrical connection pilot valve
6	Solenoid of the pilot valve
7	Exhaust for pilot valve (not visible)
8	Exhaust of dome regulating valve
9	Exhaust of dome regulating valve (with option of quick venting)
10	Earth connection



## 4 Technical specifications

Description	Unit	Value
Design		Pneumatically pilot-controlled seat valve (3/2 WV)
Materials		Stainless steel, brass, nickel-plated steel
Seals		NBR
Pneumatic connections		input (1) and output (2): Ø 40 mm
Input pressure	[bar]	max. 45
Pressure regulating range	[bar]	0 ... 40
Flow rate at 8 bara input pressure 7 bara output pressure 20,05°C, 1,01325 bara	[m³/h]	657
Operating medium		Harmless gases, compressed air acc. to ISO 8573-1:2010[7:4:4], oiled or free of oil, condensate-free, 50 µm filtered
Inlet filter	[µm]	--
Mounting position		Solenoid must not face downwards
Degree of protection		IP40
Weight	[g]	12.1

Temperatures	Unit	Value
Ambient temperature	[°C]	0 ... 40
Temperature of medium	[°C]	0 ... 40
Storage temperature	[°C]	-40 ... 85

Maximum Accuracy	Unit	Value
Hysteresis	[bar]	< 1
Linearity	[% FS]	< 1
Response sensitivity	[bar]	< 1
Repeatability	[bar]	< 1
Temperature drift	[% /10K]	< 0.1
Long-term drift	[% FS/a]	< 1

## 4.1 Electrical data table

Description	Unit	Value
Supply voltage	[V]	24 V DC V DC (-10% ... +20%)
Current consumption	[A]	max. 1.8 A
Set value input	[V] v [mA]	4 mA ... 20 mA proportional to 0 ... 40 bar
Actual value output	[V] v [mA]	4 mA ... 20 mA proportional to 0 ... 40 bar

## 4.2 Pin assignment




Pole diagram, contact side plug

DIN 7-pin connector	
	Pin assignment
Pin 1	24 V DC V DC Supply voltage
Pin 2	0 V Ground supply voltage
Pin 3	Set value input 4 mA ... 20 mA (RE < 250 Ohm)
Pin 4	0 V Ground set value and actual value
Pin 5	free
Pin 6	Actual value output 4 mA ... 20 mA (RL < 600 Ohm)
Pin 7	free


## 4.1 Dimensions

Dimensions in  
mm

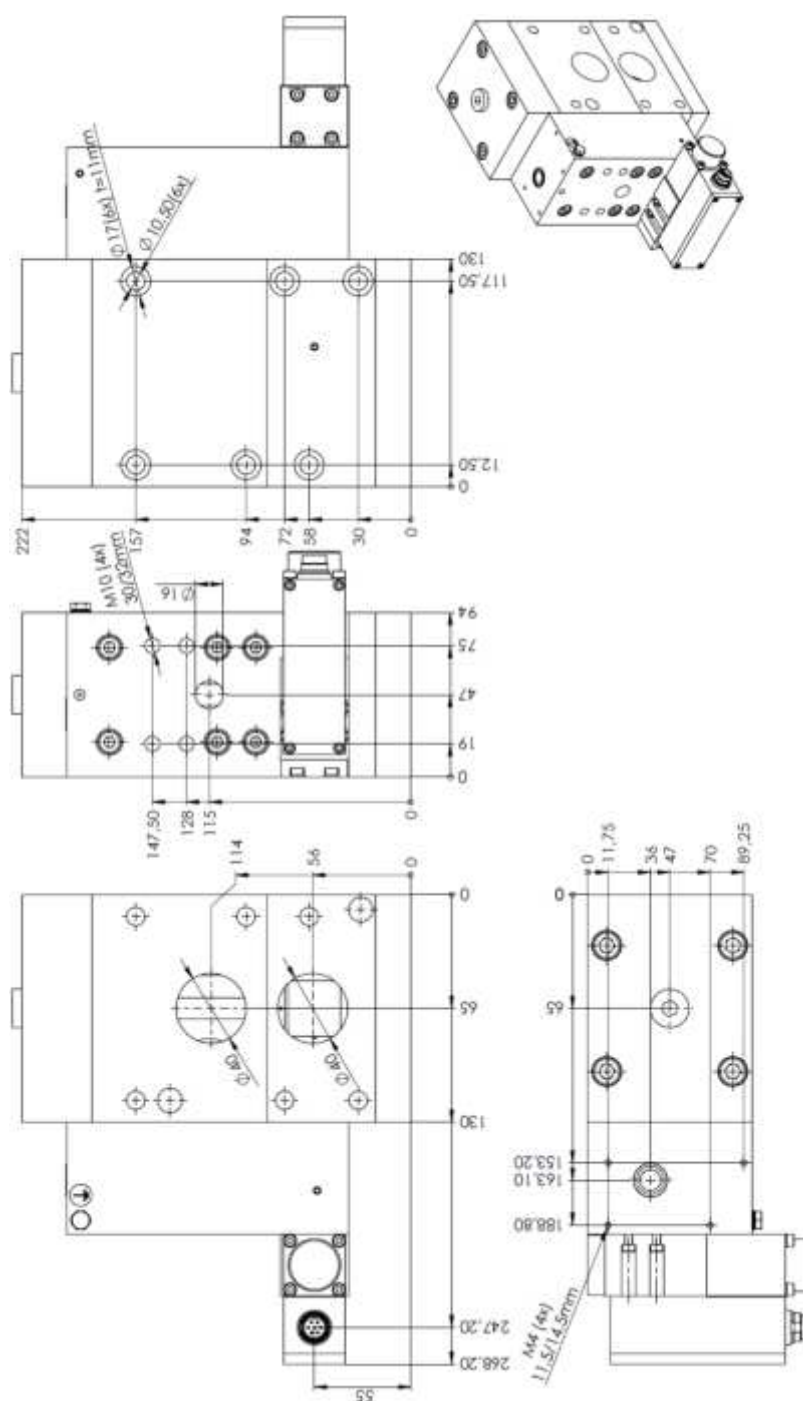

Subject to technical changes

## 4.2 Flow chart

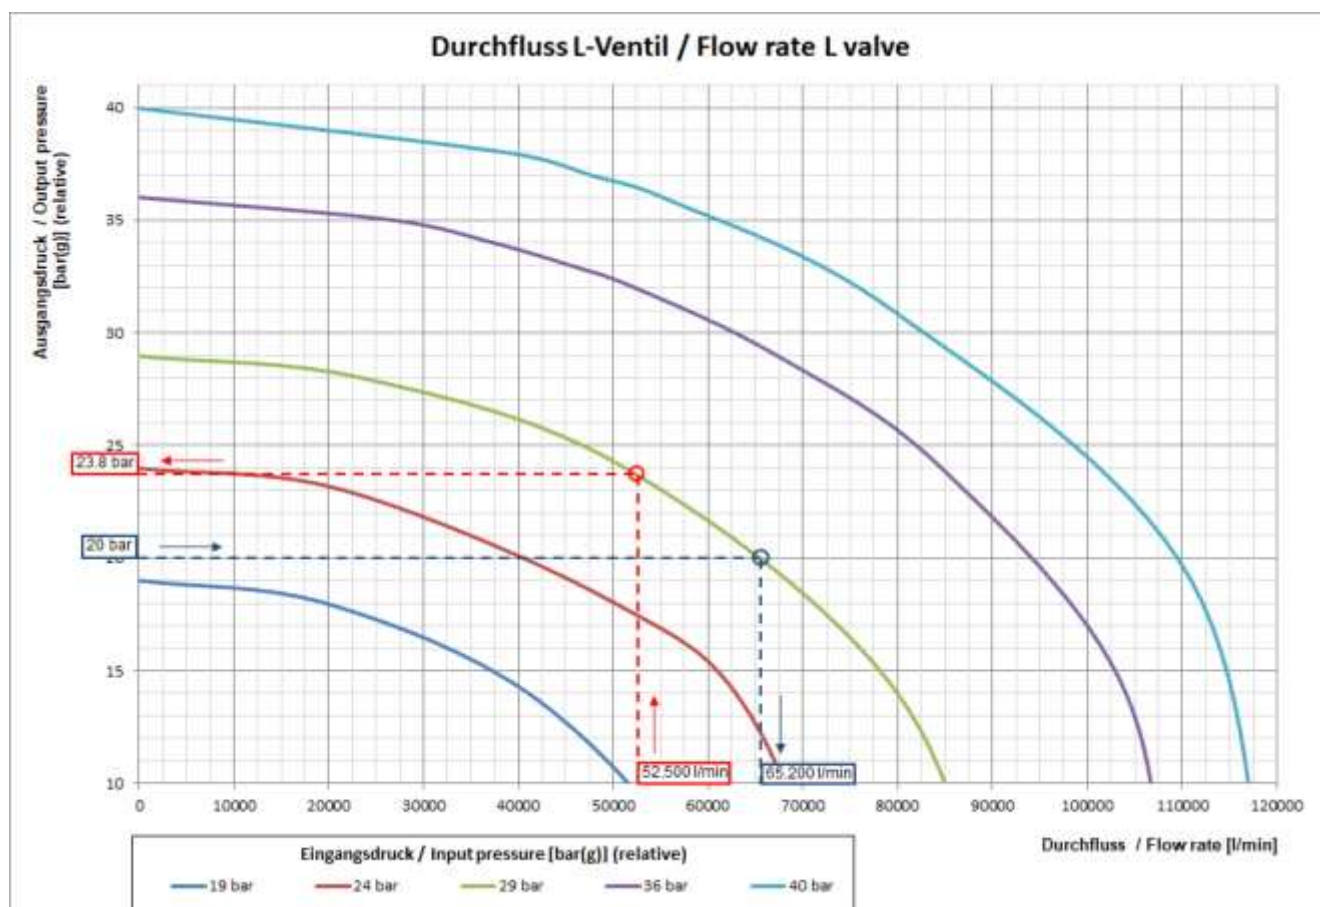

### Definitions:

Absolute pressure:	pressure in relation to absolute vacuum	value in bar(a)
Relative pressure:	pressure in relation to ambient pressure (in this case 1,01325 bar)	value in bar(g)
Flow rate:	air quantity at 20,05 °C and 1,01325 bar(a)	value in l/min ( <u>not</u> NI/min)

### Diagram parameters:

Temperature 20,05°C

Relative pressure values, that means absolute values – 1,01325 bar(a)

Medium: air

### Reading examples for curve 30 bar input pressure:

Determining of the maximum output pressure at required flow

(red dashed line)

With a required flow of 52,500 l/min, a maximum of 23.8 bar output pressure can be regulated before the valve is fully opened and no further increase is possible.

Determining of the maximum flow rate at required output pressure

(blue dashed line)

With a required output pressure of 20 bar, a maximum flow of 65,200 l/min can be achieved before the valve is fully opened and no further increase is possible.

## 5 Packaging and transport

### NOTICE

**Only use original packaging materials.**

**Only original packaging materials ensure clear identification, a safe storage and an easy handling.**

- Keep the device in original packaging just before installation.
- For the disposal of the packaging, see the disposal chapter.
- Only remove the sealing plugs or adhesive films before installation

## 6 Installation and connection

### **Danger**

#### **Danger to life due to incorrect installation**

Improperly fastened connections can come loose due to the high pressure and cause life-threatening injuries.

- The valve must be secured to all mounting holes on the machine structure.
- All connections must be made using lines designed for this pressure.
- Observe the correct tightening values of the parts manufacturer for fastening and connections.

### **WARNING**

#### **Pressurized systems and facilities must be operated by qualified personnel only!**

Assembly, installation, commissioning, maintenance and disassembly of compressed air systems may only be carried out by trained and experienced personnel.

### **WARNING**

#### **Observe all safety instructions of chapter 2**

Failure to observe the safety instructions may result in injury to personnel or damage to the equipment.

### 6.1 Prior to installation

Before installing the valve make sure that

- the stationary pipe system is depressurized and vented.
- the pipes are clean and free from particles.
- the shut-off valves are connected to the pressure pipe system of the plant.

## 6.2 Mounting and pneumatic installation

### WARNING

**Pressurized systems and facilities must be operated by qualified personnel only!**

Assembly, installation, commissioning, maintenance and disassembly of compressed air systems may only be carried out by trained and experienced personnel.

The valve must be fastened to the system with screws at all mounting holes acc. to the dimension drawing

The valve must be installed in accordance with the connection markings and specifications in the technical data and device description.

## 6.3 Electrical installation

### WARNING

- Electrical connections and systems must be installed and operated by trained and experienced personnel only.
- Use a power supply with electrically protective separation, according to DIN EN 60204-1.
- Comply with the requirements for PELV circuits, as specified in DIN EN 60204-1.

Always connect the valve to the protective earth. The connection point is shown in the device description.

The valve must be installed in accordance with the connection markings and specifications in the technical data and device description.

## 7 Commissioning, operation, malfunction

### WARNING

**Pressurized systems and facilities must be operated by qualified personnel only!**

Assembly, installation, commissioning, maintenance and disassembly of compressed air systems may only be carried out by trained and experienced personnel.

### NOTICE

The device only works properly within the defined pilot pressure range.

### NOTICE

If a set value is given without pressurizing the device or if the operating pressure is smaller than or equal to the set value, an exceeded warming of the solenoid will be the consequence. This can result in a reduced accuracy of the sensor system as well as a shortened service lifetime of the sensitive electronic components.

- Ensure that the operating pressure is always at least 1 bar greater than the maximum regulated output pressure or maximum set value.

Comply with the operating conditions and permissible limit values (→ Technical specifications).

- Keep high-frequency electromagnetic radiation sources (e. g. radio equipment, mobile phones, other jamming transmitters) and strong magnetic fields away from the device in order to avoid disturbances of the set value signal.

## 7.1 Failure

### **WARNING**

- If the device can no longer be operated safely, it must be taken out of operation and secured against unintentional operation.
- A safe operation is no longer possible if:
  - The device is damaged
  - The device is no longer working
  - Parts of the device are loose
  - The connection lines are damaged

Dear customer, our products are subject to a strict quality control. If this product is still not working properly, we regret it very much.

If you have not been able to eliminate the error yourself, please contact our

**Service-Hotline +49(0)7081 9534-0**

**E-Mail: [info@mls-lanny.de](mailto:info@mls-lanny.de)**

### **NOTE**

The warranty / guarantee expels automatically if any label or serial number is changed, made illegible or removed.

## 8 Maintenance and cleaning

### **WARNING**

#### **Improper maintenance may result in injury!**

- Repairs and maintenance must only be carried out by the manufacturer or by specialists commissioned by the manufacturer.
- Inspection or maintenance of products and equipment may only be carried out once it has been verified that they are in safe and locked switching state.
- The housing of the device may only be opened by the manufacturer or by a specialist assigned by him.
- If components should be removed, all relevant safety instructions must be observed. Then disconnect the compressed air and power supply and drain all residual air from the system.

### 8.1 Maintenance

Apart from regular cleaning, there are no maintenance activities for the end user.

In the event of a repair, the appliance must be sent to the manufacturer.

### 8.2 Cleaning

Regularly clean the device with a soft cloth.

The permissible detergent is water or soap solution (max. 50 °C).

## 9 Disassembly

### **WARNING**

#### **Pressurized systems and equipment are dangerous for laymen!**

Pressurized systems and equipment may only be mounted, installed, commissioned, maintained, repaired, decommissioned and disassembled by qualified personnel.

Follow these steps to disassemble the device:

1. Turn off all power sources:
  - 1.1. Power supply
  - 1.2. Air supply
2. Depressurize the system.
3. Remove all electrical and pneumatic connections.
4. Loosen the mounting screws and remove the device.

## 10 End of life – EOL disposal



Dispose the device in accordance with the applicable environmental regulations of your country.

The electrical equipment should not be disposed with other household wastes. Hand over the device to a central recycling facility for electronic waste.



The device packaging is made of recyclable materials. Sort the packaging materials and recycle them accordingly.

For more information on recycling, please contact your local authorities or the manufacturer.



The device is lead-free and contains only RoHS-compliant components.

## 11 Imprint

This operating manual is published by

### **MLS Lanny GmbH**

Beermiss 14, D-75323 Bad Wildbad (Germany)

Fon: +49 (0)7081 9534-0

E-Mail: [info@mls-lanny.de](mailto:info@mls-lanny.de)

Website: [www.mls-lanny.de](http://www.mls-lanny.de)

© MLS Lanny GmbH, 2025, all rights reserved.

These operating instructions correspond to the current technical state at the time of printing.

This document must not be distributed or replicated without the written consent of the manufacturer. All rights reserved in the event of patent, utility model or design registration.